

# Car-Go-Mate™ Series

HITCH MOUNTED LIFTS

## Car-Go-Mate 100-MWC

Manual  
Wheelchair Lift  
CGM-100-MWC



## Car-Go-Mate 150-UL

Ultra-Light  
Power Chair &  
Scooter Lift  
CGM-150-UL



## Car-Go-Mate 225-S & 225-HD

Power Chair &  
Scooter Lift  
CGM-225-HD



## Car-Go-Mate 350-P

Heavy Duty  
Power Chair Lift  
CGM-350-P



## Car-Go-Mate 350-S

Heavy Duty  
Scooter Lift  
CGM-350-S



## Experience the Ease of Going Strapless

With limited mobility often comes limited dexterity. Customers should not have to cope with cumbersome, hard-to-handle straps. The Car-Go-Mate 225-HD, 350-P & 350-S feature positive lock-down systems that secure the power chair or scooter without additional tie-downs.



ISO 9001:2000 & QS 9000:1998

**FREEDOM LIFT**  
CORPORATION

North 2nd Street | P.O. Box 129 Green Lane, PA 18054  
800.755.2856 | Fax 800.809.6519 | [www.freedom-lift.com](http://www.freedom-lift.com)

# Car-Go-Mate™ 350-P & 350-S

POWER CHAIR AND SCOOTER LIFTS (Formerly the Patriot and Spirit)

Both the **Car-Go-Mate 350-P** and **Car-Go-Mate 350-S** easily attach to the receiver hitch. The **350-P** requires the appropriate docking "plow" to be attached to the bottom of the power chair. As you position the power wheelchair onto the platform, the lift is operated and the power chair "latches-in" to a secure position without the use of straps.

The **350-S** Scooter Lift can be configured to accept three and four-wheel scooters. As the lift is operated, the scooter is raised and securely "clamps-in" with the automatic Hold-down Arm without the use of straps.

The **350-P** and **350-S** lifts offer a weight-sensitive platform to automatically fold up and out of the way when not in operation.

**(Coming July 1, 2005: Both the 350-P and 350-S Car-Go-Mates will offer a New Platform Height Adjustment of 4", vertical column adjustment of 5° and New In-line Swing Away Arm.)**

## Car-Go-Mate 350-P Features:

- **Dock-N-Lock™ System** | Automatically secures the power chair to the platform.
- **Adjustable** | Accommodates a wide range of power chairs.
- **Automatic Tilt** | For added ground clearance and weight transfer.
- **Reliable** | Platform wheel chocks and docking mechanism assures proper power chair positioning.
- **Limited Lifetime Warranty** | Guarantees customer satisfaction.
- **Optional "Coastal Community" Black Finish** | Provides 1,000 hours of salt-spray corrosion resistance.

## Car-Go-Mate 350-S Features:

- **Convenient** | Automatically clamps the scooter to the platform.
- **Adjustable** | Adapts to a three or four-wheel scooter without scooter modifications. (Certain scooters may require a special platform.)
- **Automatic Tilt** | For added ground clearance and weight transfer.
- **Weight-Sensitive Platform** | Automatically folds when lifted without a scooter or power chair on the platform.
- **Forward or Reverse Exit From Platform**
- **Platform Wheel Wells Assure Proper Scooter Positioning**
- **Limited Lifetime Warranty** | Guarantees customer satisfaction.



**Car-Go-Mate HD-P**  
Heavy Duty Power Chair  
CGM-350-P



**Car-Go-Mate HD-S**  
Heavy Duty Scooter  
CGM-350-S

## Guardian™

IN-LINE SWING AWAY



**Guardian 225-HD**  
In-Line Swing Away

The **Guardian In-Line Swing-Arm** is designed to work with any wheelchair, power chair, or scooter lift made to fit a receiver hitch. It attaches easily to the vehicle and allows the unloaded lift to swing away for trunk or tailgate access. The secure latching device provides easy movement with minimal effort. The Guardian comes pre-wired to facilitate lift electrical connections and is available on all Car-Go-Mate Class I, II and Class III (2") lifts.

## Features:

- **Swing Away Capability** | Allows hitch-mounted lift to swing away from your vehicle.
- **Automatic Latching with Visual Latch Indicator**
- **Ramped Latch for Easy Engagement**
- **Cushioned Handle Operates with Minimal Effort**
- **Pre-wired to Facilitate Electrical Connections**
- **Limited Lifetime Warranty** | Guarantees customer satisfaction.

# Car-Go-Mate™

MANUAL WHEELCHAIRS, ULTRA-LIGHT POWER CHAIRS,  
STANDARD SCOOTERS AND ULTRA-LIGHT SCOOTER LIFTS


The Car-Go-Mate exterior wheelchair and scooter lifts are designed to handle today's popular manual and ultra-light power wheelchairs, and standard and ultra-light scooters with either a patented **Self-Tensioning Strap** or **Automatic Hold-Down Arm**. All lifts easily install on vehicles with Class I or II (1 1/4" hitch receivers) or Class III (2" hitch receiver), depending on the product and vehicle tongue weight. The Car Go Mate features a low profile design to eliminate rear-vision obstruction and offer a simple, sturdy design. All have been tested for quality in static laboratories, as well as in dynamic real-world conditions through Freedom Lift's strict quality test standards.

## Car-Go-Mate 150-UL, 225-S & 225-HD Features:

- **Convenient** | Clamps the scooter or power chair to the platform with a Self-Tensioning Strap or Automatic Hold-Down Arm.
- **Safety Latch** | Prevents unintentional lowering of the lift platform.
- **Easy "Fold/Unfold" of the Lift Platform** | Offers gas-spring counter balance assistance.
- **Vertical Column has 5° of Angular Adjustment** | Compensates for un-level hitch installation.
- **Tested in Static Laboratories and Dynamic Real World Conditions**
- **Car Go Mate Wheelchair (CGM-100-WC)** | 100 lb. Lifting Capacity
- **Adjustable Platform** | Accommodates a wide variety of three & four-wheel scooters, and power chairs. (CGM-150-UL = 150 lb. Lifting Capacity; CGM 225-S & 225-HD = 225 lb. Lifting Capacity.)
- **Your Class II Alternative**

## All Car-Go-Mate & Guardian Products Feature:

- **Robust Welded Steel Construction**
- **Available in Class I, II (1.25") or Class III (2") Models**
- **Easy to Install & Adjust** | Can also be reinstalled if you purchase a new vehicle.
- **Powered by the Optional Mobile Power Pack** (Hard-wired version is standard.)
- **Adjustable** | Accommodates a wide range of ultra-light power chairs or standard scooters.
- **Lighted License Plate Bracket** | Illuminates Lift
- **Keyed Operation for Added Security**
- **Single Rocker Switch Control**
- **Manual Fold-up in the Event of a Power Failure**
- **Optional "Coastal Community" Black Finish** | Provides 1,000 hours of salt spray corrosion resistance.
- **Limited Lifetime Warranty** | Guarantees customer satisfaction.

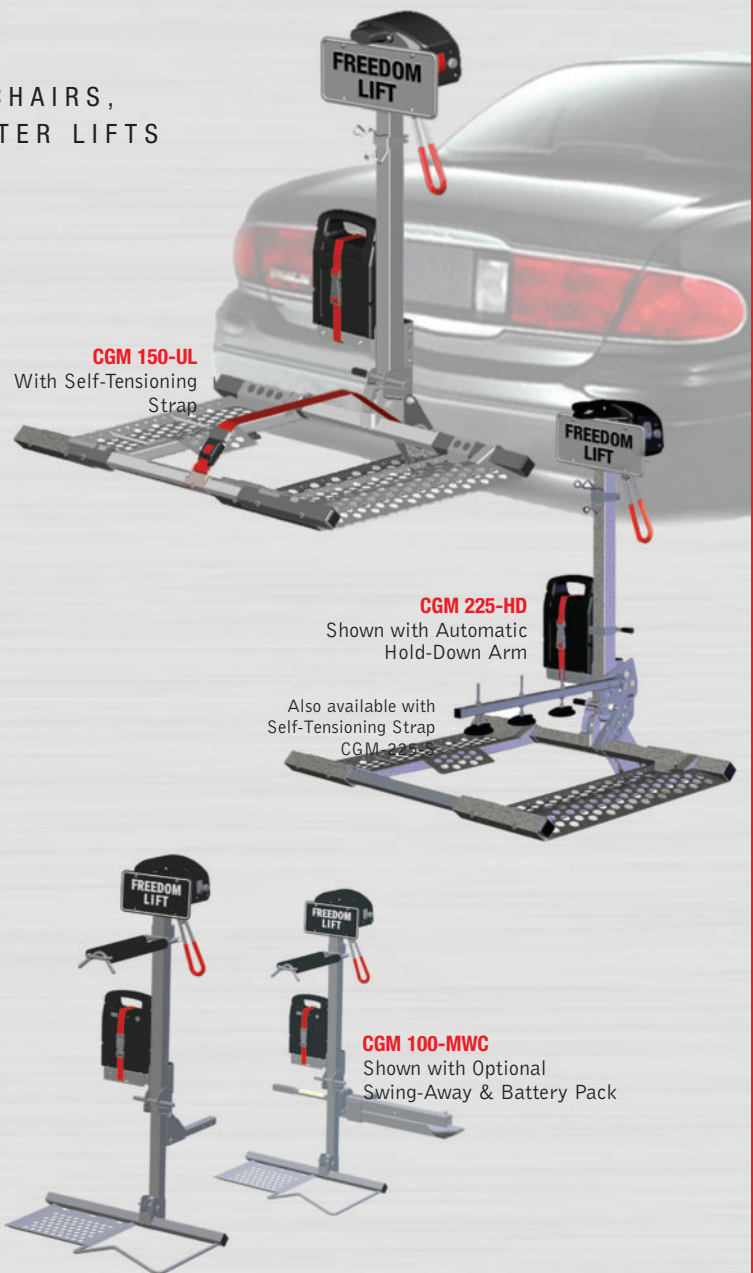

## Vehicle Requirements:

The Car-Go-Mate & Guardian will fit most medium and large sized vehicles. The combined weight of swing away arm, power wheelchair or scooter lift **must not exceed the tongue weight limits of your hitch or vehicle**. Always confirm your vehicles tongue weight with Freedom Lift prior to installing the lift.

Certain applications may require a suspension modification in order to properly support the lift and power wheelchair or scooter.

**Freedom Lift Corporation now incorporates an "Exclusive 4" Gooseneck" feature to provide additional ground clearance on vehicles that have hitches with low ground clearance.**

- In most cases, the Car-Go-Mate Power Chair and Scooter lifts reduce your hitch ground clearance by no more than 1/2".

# Car-Go-Mate & Guardian Specifications:

Model Number	CGM-350-P	CGM-350-S	CGM-100-MWC Manual Wheelchair	CGM-150-UL Self-Tensioning Strap System	CGM-225-HD *	Guardian 350 Swing Away	Guardian 100, 150 & 225 Swing Away
Recommended Maximum Carrying Capacity (Class II & III)	350 lbs.	350 lbs.	100 lbs.	150 lbs.	225 lbs.	N/A	N/A
<b>DO NOT EXCEED THE CAPACITY OF THE HITCH/TONGUE WEIGHT OF THE VEHICLE.</b>							
Weight of Lift	110 lbs.	110 lbs.	55 lbs.	75 lbs.	84 lbs.	35 lbs.	28 lbs.
Maximum Lifting Height	21.25" platform to ground	21.25" platform to ground	28"	28"	28"	N/A	N/A
Actuation	12 VDC motor powered by vehicle	12 VDC motor powered by vehicle	12 VDC motor powered by vehicle	12 VDC motor powered by vehicle	12 VDC motor powered by vehicle	N/A	N/A
Vehicle Receiver Hitch	Class II (1.25") or Class III (2")	Class II (1.25") or Class III (2")	Class I (1.25"), Class II (1.25") Class III (2")	Class II (1.25"), Class III (2")	Class II (1.25") Class III (2")	Class II (1.25") Class III (2")	Class II (1.25") Class III (2")
Horizontal Hitch Adjustment	4 positions (3" range)	4 positions (3" range)	2 positions (2" range)	2 positions (2" range)	2 positions (2" range)	2 positions (2" range)	2 positions (2" range)
Track Width	N/A	Three 8" Tracks	N/A	N/A	N/A	N/A	N/A
Maximum Width Chair/Scooter	27"	27"	14.5" folded manual wheelchair lift	24.25"	24.25"	N/A	N/A
Maximum Wheelbase Chair/Scooter	35"	40"	N/A	33.50"	33.50"	N/A	N/A
Minimum Extension Beyond Receiver	41.5" w/ power chair 17" (folded)	41.5" w/ scooter 17" (folded)	28.5" w/ wc 15" (folded)	40.5" w/ scooter 15" (folded)	40.5" w/ scooter 15" (folded)	ADD 2"	ADD 2"
Platform Adjustability (Hitch to Platform)	2.25" - 6.25"	2.25" - 6.25"	5.5" - 7.5"	5.5" x 7.5	5.5" x 7.5"	N/A	N/A

\* (CGM-225-HD: Available with BOTH the Automatic Hold-Down Arm or Self-Tensioning Strap System.)

## Car-Go-Mate 150-UL, 225-S & 225-HD Hitch Height Specifications

AVAILABLE FOR BOTH POWER CHAIR AND SCOOTER LIFTS

### 4" Hitch Gooseneck Tongue Bar

For use on vehicles with hitch heights ranging from 6-5/8" to 23-1/4"

